



Manning Valley Hockey Association Scoreboard Instructions to Operate

These instructions should be read in conjunction with the more detailed explanation found inside the computer cases. In these notes is a trouble shooting section



Steps

1. Obtain scoreboard keys from the canteen – plastic draws near cash register. Both keys to score boards are on the one key ring.
2. Go to scoreboard – insert key into switch located on side of post and turn on.
3. Get computer which are kept in yellow cases.





4. At the moment the computer for the Alan Taylor Field can be powered from either the dugout or the verandah overlooking the field.
5. Plug in computer to 240 volt power point but **don't turn on**. The power chord is plugged into the left side of the computer




6. The transmitter antenna is plugged into the USB port (right side).
7. Open the lid and turn on the computer using the ON/Off switch on top right side of the computer,




8. If the program doesn't automatically open then you can open it manually via the Scoreboard/Manning Valleys program file on the desktop. Just double click folder and double click on the Aussports icon.



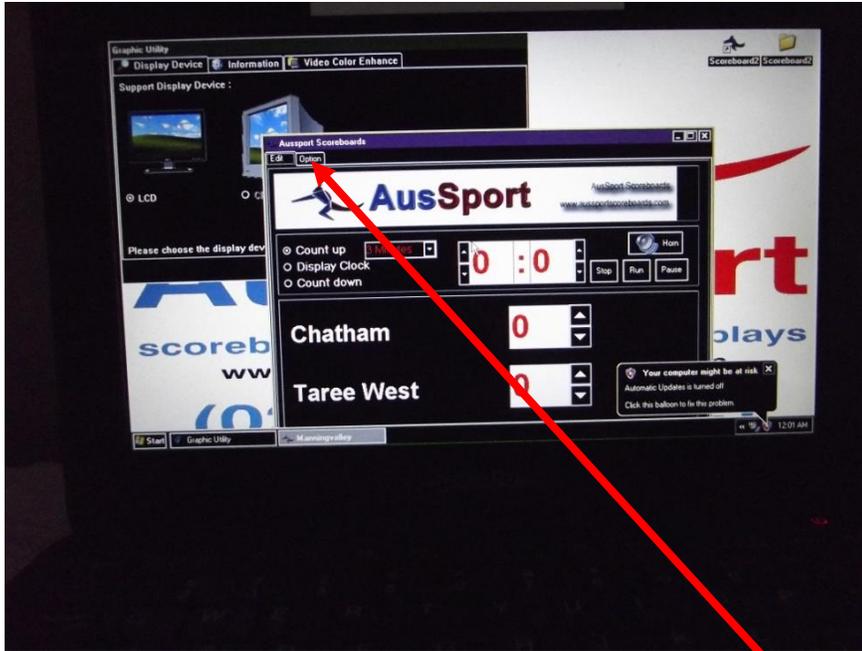

You should get a screen as above. Then go to OPTIONS

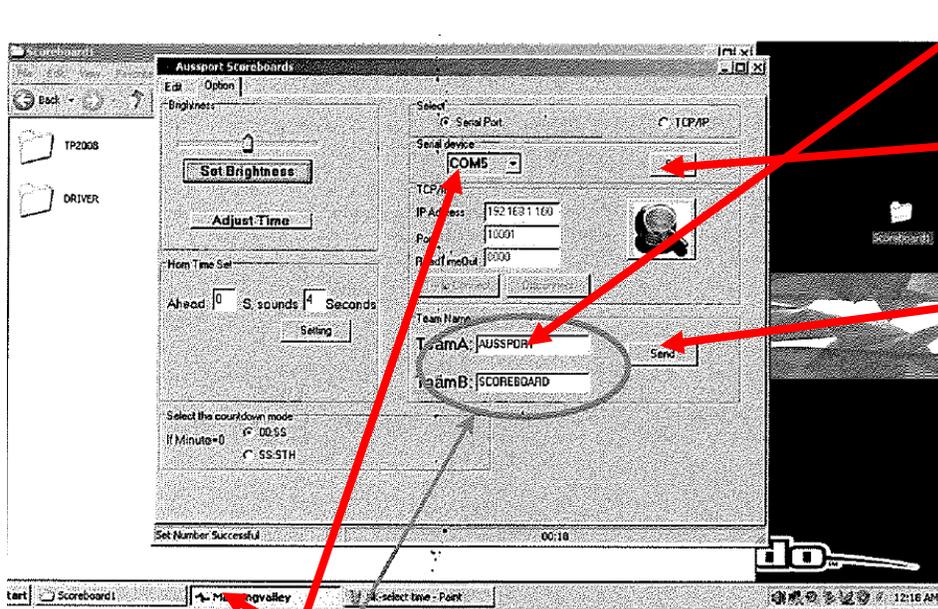


a. Type in team names and then
b. hit set

b. Then hit send


If the computer is not communicating with the score board make sure that it is showing COM PORT 4 which is for one of the bottom USB ports. **The bottom left of the screen will say success if when connected.**

9. The scoreboard should light up with the information

NOW GO TO EDIT

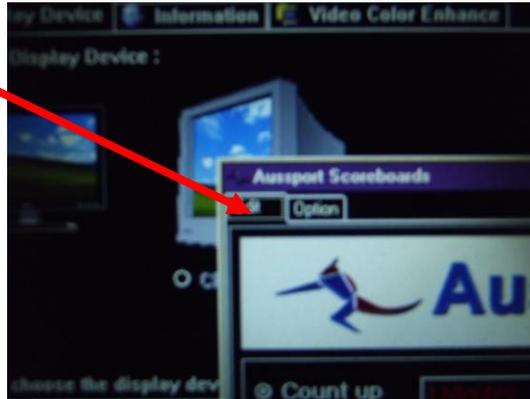

1. Locate time buttons and when on **PAUSE** adjust to settings

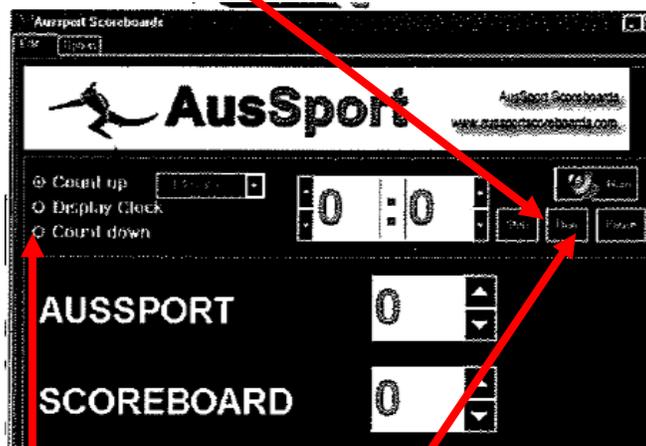

Time /up or down etc.

2. Highlight "count down"

3. Hit RUN when you want the clock to start.

4. Scoring by using the mouse to move scores up or down.

5. HORN can be operated two ways.

Automatic and will sound when time is 00

Manually by hitting the horn button using the mouse.

DO NOT CLOSE LID BEFORE SHUTTING DOWN

1. Turn of computer by going to shut down with mouse. Found in bottom left corner of computer

- 2. Disconnect leads and put in yellow plastic box with computer and put back on table near PA System.**
- 3. Turn off scoreboards using keys and put them back in the plastic draw near canteen cash register.**

SUCCESS !! THANKYOU

John Surtees

Thursday, May 5th 2018